


M MAGBEE

CONTRACTORS SUPPLY

1065 Bankhead Highway
Winder, GA 30680
678-425-2600

**Cut All SHIMS to Exact Thickness. Do Not Over Shim!*

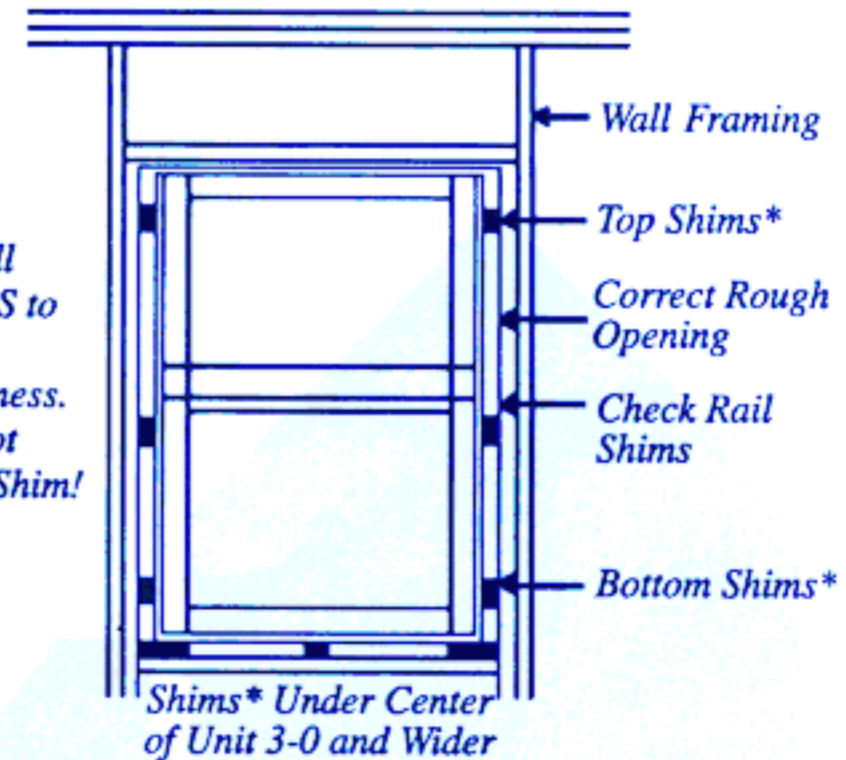

Installation Guidelines:

- The rough opening must be properly framed.
- The unit must be plumb and square.
- Exterior casing is to be held straight and nailed no more than 18" apart. Use 16 D galvanized casing nails.
- Jambs are to be shimmed in at no less than three locations to hold them straight and parallel (top, checkrail and bottom).
- Shims need to be placed anywhere under the sill and jamb to insure the sill is straight and will not sag.
- Check for proper fit and operation. Adjust as needed.

Finishing Guidelines:

- Unit must be finished immediately after installation, minimal one coat quality latex paint.
- Unit must be clean and dry at the time of painting.
- Areas where unit components join are to be caulked, i.e., casing to siding, casing to blind stop, casing to sill nosing, sill nosing to sub sill, joints in the sash rails mulls, including installation fastener holes.
- Once a year the unit must be checked for cracks in the caulk and paint. Any problems must be repaired. This is the sole responsibility of end user.
- Failure to follow installation and finishing instructions will void manufacturer's warranty.
- Note: Fixed sash must not be caulked between bottom of sash and sill.